



DEFEND GROUP CO., LTD.
www.defend.tw



ISO 9001


Registration Number: UCS-Q-13-077



Management System
Certification
MS008



Certificate No: 48770

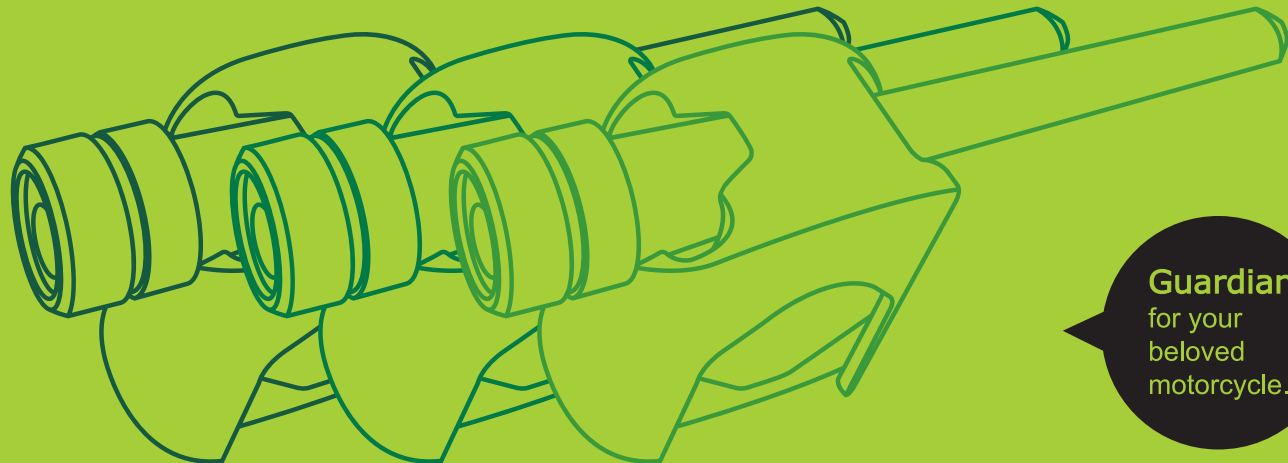

Guardian
for your
beloved
motorcycle.

INSTALLATION
INSTRUCTION

MANUAL



- 1 Installed on the shock absorber on either left or right side.
- 2 The disk type should be kept away from the disk rotor during the installation.
- 3 It is the best installation height when the lock pin can be inserted.

INSTALLATION FIGURE

- 1 Stick two pcs of rubbers inside the base of cylinder case.
- 2 The lock hole of cylinder case could be faced forward or backward for installation.
- 3 Using the hex wrench for fastening the screw.

ASSEMBLY FIGURE

- 1 Use the screws to fix the cylinder storage case in the motorcycle glove box in the suitable position.
- 2 Take out the lock pin from the storage case.
- 3 Insert the lock pin directly till the end to lock up without keys.
- 4 Turn the key clockwise and take out the lock pin to unlock.

LOCK-PIN STORAGE SOCKET

ASSEMBLY FIGURE