


The Steps of  
Installment  
(Attached type  
for front door)


※ You can also install  
in the rear door with a  
same method.

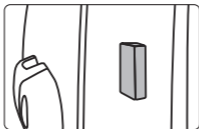

1. Use the long side of magnet  
to match place of warning  
light, then stick down the  
magnet on it.



2. Close the rear car door to  
test if there is any collision on  
the magnet.

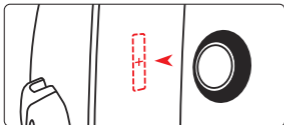


3. If there is no collision, the product can be  
installed to the test location.




4. Make sure the product won't be drop  
down and flash normally.




5. At the rear door sheet metal to find the  
corresponding location, then have strong  
magnet attached.

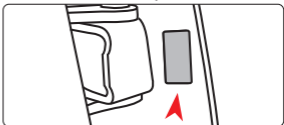

6. If it cannot be installed at the vehicle  
bearing, you can also find the magnet  
corresponding location from the side part  
of the door and have it drawn to here.

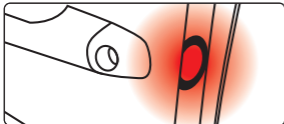


7. Make sure if the product can act normally  
when the door is closed.

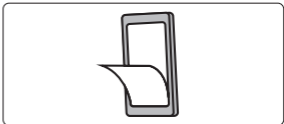


8. Clean the surface of attached place with  
alcohol or stain-remover. And remove  
sticker of the magnet to paste it in the  
corresponding position. Complete the  
installation.

## How to replace the battery


※ Please remove the mylar at first time using.

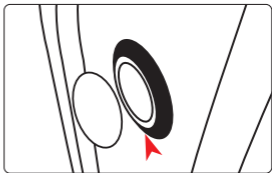


1. Take off the upper cover and do not drop the motherboard.

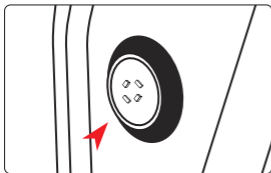

2. Move aside the edge of rubber.

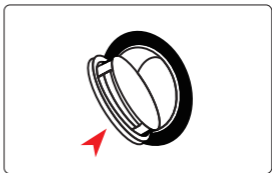

3. Remove the motherboard from the door warning light.

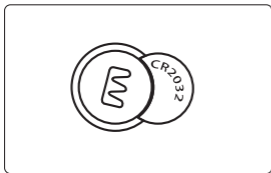

4. Replace the new battery. Make sure the battery polarity is reserved and the LED starts to flash.



5. Test function and complete.